 


SONG LIST

(User's Manual is Inside)

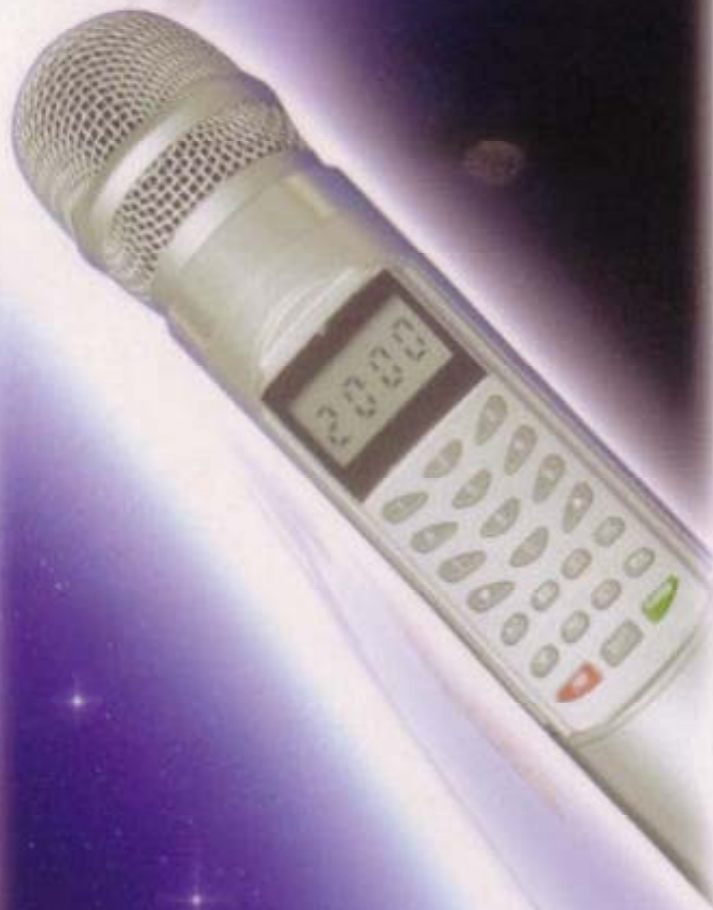




How to Install


How to connect with TV



How to connect with TV and the stereo

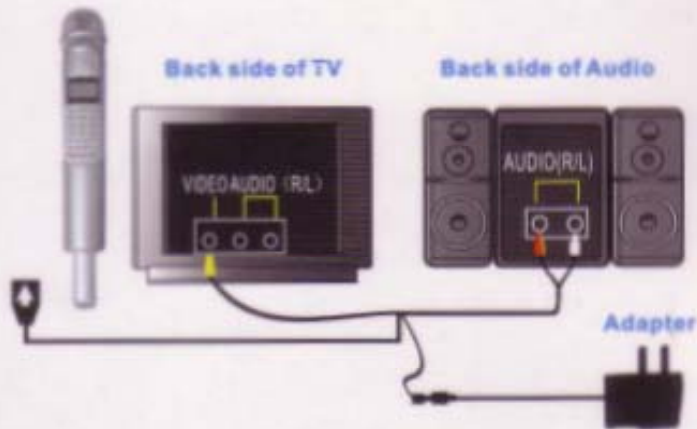

How to connect with MIC and the main cable

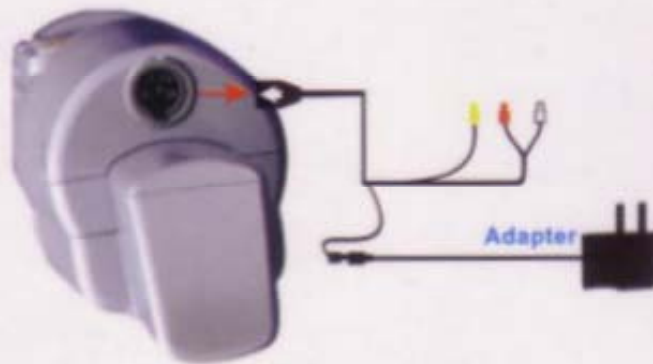

How to connect with other microphone





How to Operate

1. Connect cable to TV (refer to "How To Install")
2. Connect cable to this product
3. When you use an adapter:
Connect adapter to cable adapter jack.
When using the battery microphone:
Open the back cover of the microphone,
then insert 4 or 2 AA batteries (use Alkaline batteries)
4. Turn on the TV and set the channel to video
(external input).
5. Turn microphone power ON.
6. When the TV shows the picture, select the number of
the song, and then it will start to play the music.
When you press the "PLAY/STOP" button once, it will start.
When you press the "PLAY/STOP" button again, it will stop.
7. The product summary page will explain the
microphone functions.
8. If there are only two holes for the external input in your
TV (mono TV), put the yellow jack into the yellow hole
and put the red or the white jack into the other hole.




Basic items

Song List Book



Main-microphone

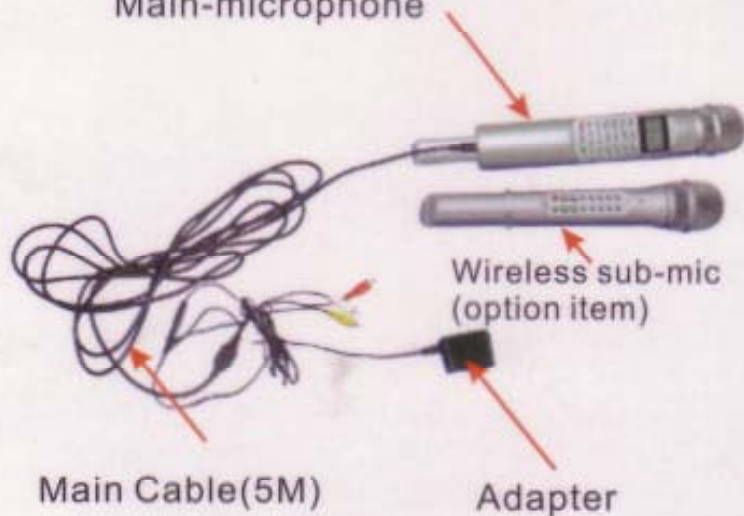

Option items

Song Pack




PRODUCT SUMMARY

MIDI Microphone instruction manual

Composing of system

1. Main circuit : consist of some circuit boards and components
2. Microphone: capacitance type
3. LCD display windows : consist of five numbers and function symbols.
4. Button: Set up as 23 buttons . Refer to the below sketch map.
5. Accessories: Audio ,Video output ,Earphone Jack.

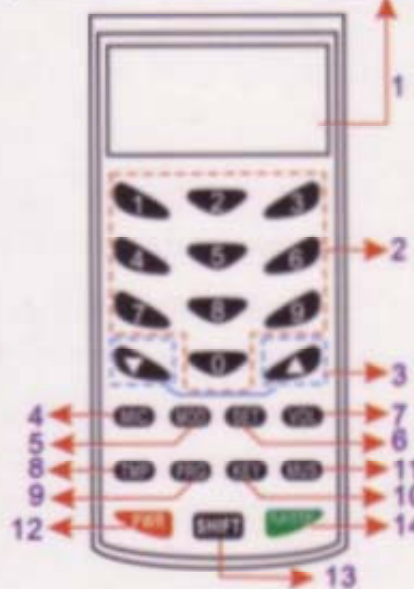

Main-microphone



Sub-mic

Sketch map 1-1 for LCD and button

● Basic function:

1. LCD display will show song selection number and function.

2. Number button 0~9 :

For selecting song No.

For example 1: Press 5, 2, 1, 3 to select song No. as 5213"

▶ "0" can be omitted in the front of the song No. of less than 5 digits .

For example 2: press 2, 1, 3 to select song No. "213"

For example 3: press 0, 0, 2, 1, 3 to select song No. "213"

▶ If you got wrong song No., you can go on press the right song No. you want.

For example 4: press 2, 1, 3, 0, 0, 2, 1, 4 to select 214"

3. "▼" "▲" button :

Not in playing song mode, Enter to the song list and select song from the list .The button can adjust:

- ▶ MIC volume
- ▶ Echo
- ▶ Main volume
- ▶ Melody
- ▶ Tone
- ▶ Speed

Note:

1)After press number button to select song and before you haven't press the [PLAY/STOP] button , you can enter the songlist with [▼] or [▲] button, and the color bar on the selected song .

2)Press number button, it will be back to "select song" mode from scrolling list .

4.[MIC]:

- ▶ Adjust the MIC volume.
- ▶ Press this button first and then to adjust the MIC volume with the "▼" & "▲" button .
- ▶ MIC on LCD light and the volume number show on LCD.

5.[MOD] :

- ▶ Press the button to show the following menu:

1 Song Ordering

2 Random

3 Continuous

4 Singing Arena

5 Competition

- ▶ Press the number [1]: select song normally
Select song with the number button.

- ▶ Press the number [2]: Select song random mode.
After playing a song ,the player will play the next song automatically.
If press [PLAY/STOP] button during playing, the player will play the next song automatically.
- ▶ Press the number [3]: play song continuously
Input song No. with Number button press [PLAY/STOP] to play continuously from the selected song.
The player will play the next song automatically, if press [PLAY/STOP] button during playing.
- ▶ Press the Number button [4]: Arena game
The system judge who got highest score as winner.
Who get higher score will be new winner.
- ▶ Press the Number button [5]: Competition
*Select the competition turns "N" with number button first.
*And then the user can divide themselves into A . B group to go on competition
*Add up to their score
*Which group got higher score total will be winner.
- ▶ In the menu,press[1].and then exit.return to "select song" mode.

6.Press [SET] button:

To show the following menu after pressing this button:

- 1 Least score : 00**
- 2 Score switch :On**
- 3 Music switch:On**
- 4 Lyries shadow:Off**
- 5 Lyries switch:On**

- ▶ Press the number [1]: Set up the lowest score.
- ▶ Press the number [2]: Open or Close score function.
- ▶ Press the number [3]: Select to play the celebration music during get score.
- ▶ Press the number [4]: Open or Close "lyric shadow" .
- ▶ Press the number [5]: Open or Close "lyric switch" .
- *[SET] Press second,return before entry state.

7.[VOL]:

To adjust the music volume. The usage is same to "MIC".
"VOL"on LCD light and the volume number show on LCD. The TV screen show adjustment bar.

8.[TMP]:

To adjust the speed of music. The usage is same to "MIC".
"TEMPO"on LCD light and the volume number show on LCD.
The TV screen show adjustment bar.

9.[PRG]:

- ▶ After input the song No. and then press [PRG] button to Program.
- ▶ After playing the current song , it will play the next programmed song automatically.
- ▶ It can be programmed 8 songs at most.
- ▶ It will play the next programmed song automatically if press [PLAY/STOP] button during playing.
- ▶ To select the prior programmed song with [▼] & [▲] button .Red bar on the selected song.
- ▶ "PROG" on LCD light during program playing.

10.[KEY] :

To adjust the tone of music . The usage is same to "MIC".
"KEY" on LCD light and the volume number show on LCD.
The TV screen show adjustment bar.

11.[MUS] :

To adjust the volume of Melody . The usage is same to "MIC".
"MEL" on LCD light and the volume number show on LCD. The TV screen show adjustment bar.

12.[PWR] :

- *Turn on or turn off the machine.
- * The TV screen appears "off ? " after press the "PWR" button and then press this button again to turn off the machine.

13.[SHIFT] :

Press "SHIFT" to display menu and then press number button to select the following mode:

- [1]: To change PAL/NTSC mode for different TV.
- [2]: OSD : with the selection Chinese / English .
- [3]: To adjust the Echo. The usage is same to "MIC".
"ECHO" on LCD light and the volume number show on LCD. The TV screen show adjustment bar.
- [4]: Pause to play during playing song. "PAUSE" on LCD light.
- [5]: Repeat playing the current song. "RPT" on LCD light.
- [6]: Sub-mic on/off.

14.[PLAY/STOP] button :

To stop playing by pressing this button during the play.
To start playing by pressing this button when the song stopped.


15.[■■] button :

Pause to play during playing song. PAUSE on LCD light.

How to setup the song pack (option)



1. Press the button on the top of the cover and pull down the button of the cover of the back of the microphone.

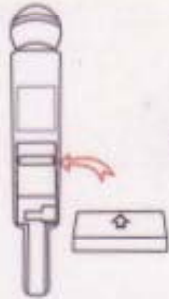

2. After turn off power , put the pack as left picture.



3.a) match the button of the cover with that of the microphone by using the right hand.
b) Close the cover pushing slightly on top of the microphone.



4. How to remove or link the cable; press down the tab and pull it to separate or link the cable.
Do not pull the cable along..



SPECIFICATIONS

1. Voice Frequency Range:

200 ~ 15,000Hz (-68db)

2. Battery :

1.5V X 4 ALKALINE (Main Microphone)

1.5V X 2 ALKALINE (Sub Microphone)

3. Life of battery : 4 hours

4. TV Channel : Video Channel

5. Specifications : 47.5 x 52.5 x 32.5(mm)

6. Weight : 290g

7. Voltage : 6 V

8. Wattage : 500mA

9. Dot : 352 x 288 (PAL)

352 x 240 (NTSC)

10. Image Color INDEX 256 Color

11. Overflow (UNDER 6V):

Built-in protection Circuit for Reverse
Voltage

12. Operation temperature: -10°C + 65°C



Trouble shooting



When the power doesn't come on

Using the Adapter

- ▶ Please confirm whether the range power Source are AC 100V- 240V.
- ▶ Check the contact point of the cable jack and the adapter jack.
- ▶ Reconnect the adapter.

Using the batteries

- ▶ Did you insert 4 or 2 AA batteries?
- ▶ Make sure the inserted batteries (+ -) are positioned in correct direction.
- ▶ Check the elasticity of the stainless steel in the battery case.
- ▶ Check if the batteries are in good condition.



If the microphone doesn't work

- ▶ Press the microphone [PWR] button and check the volume.



If the TV does not show the picture or sound

- ▶ Make sure the connectors are properly connected (the right color)
- ▶ Check if the TV is in the video mode



Wireless Sub-Mic Manual(option)

- ▶ Before using the sub-mic, please take out the wireless receiver from the packing and then install the right way in the mainframe.



Main-microphone

wireless receiver

- ▶ The key-press operation manual the same as the comparatively mainframe.



Phonetic notation

- ① During the transportation or exquisite oscillation, it is possible to bring out touching loose between songchip and unit and cause the malfunction which can not turned on the unit and no sound. please pull out the power wire and then reconnect. (when using battery to power supply need to reinstall the battery , and then turn on the power.)
- ② During the transportation or exquisite oscillation, it is possible to bring out touching loose between wireless receiver and unit and cause the malfunction which can not receive the signal from the submic. please power off and reconnect the receiver.
- ③ When sub-mic is not the right place, the wireless signal reduce, it is possible to bring out yawp from receiver.
- ④ Using battery to power supply in unit, when electricity is using up, it is possible to bring out the alternating current, please replacing the new battery.