 


SONG LIST

(User's Manual is Inside)

Super Microphone

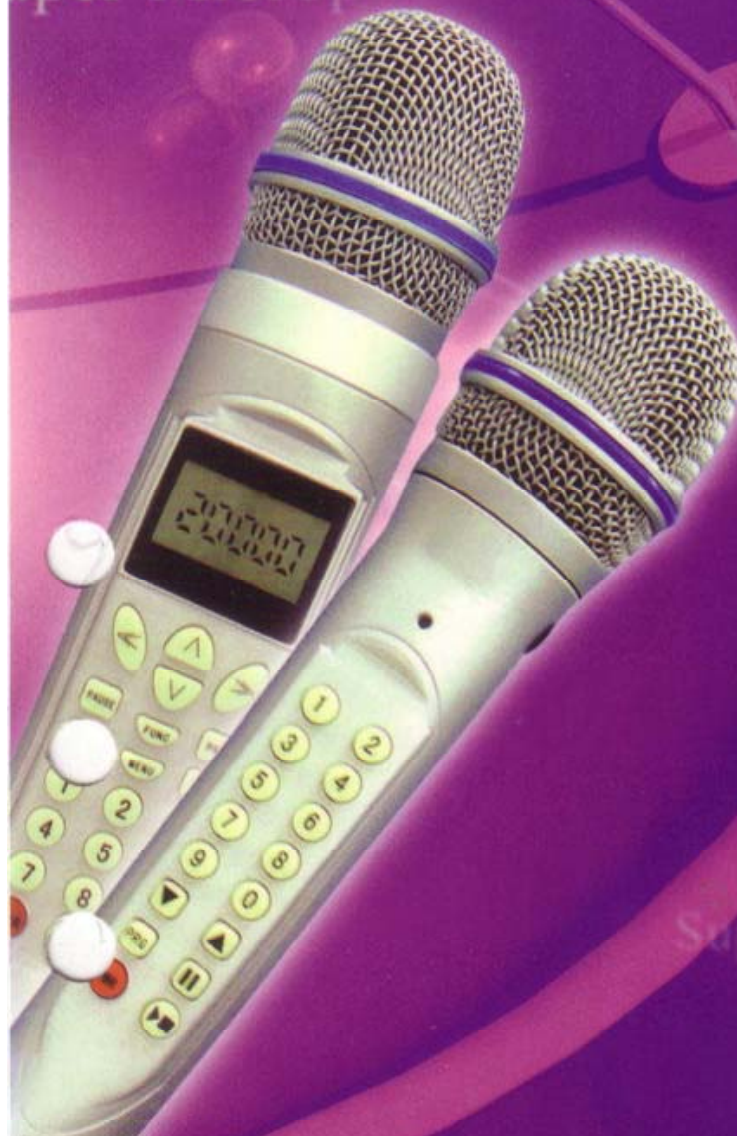

Super Mic

Super Microphone

MIDI Microphone is consisted of 2pcs microphones. One is main microphone , the other is sub microphone. The 2pcs microphones can communicate each other.

Features

- 1.Moving background
- 2.Songchip with large capacity
- 3.Song and background download via its USB port . To change the display picture on TV screen .
- 4.Choose your favorite songs to " Favorite songlist"
- 5.Recording funtion.

Front panel and System connecting






How to Install


How to connect with TV



How to connect with TV and the stereo

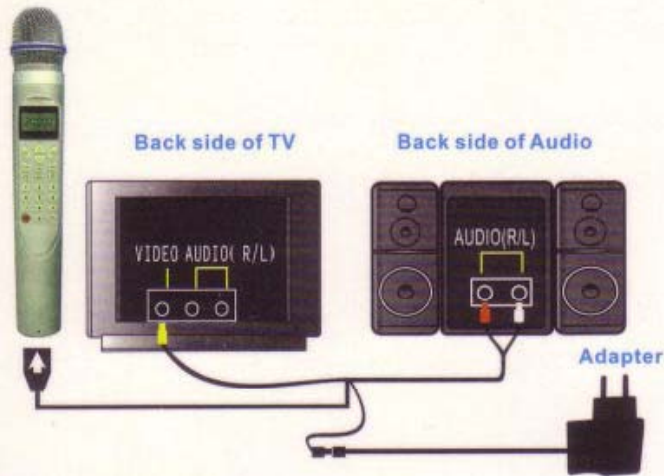

Download The Songs From Computer

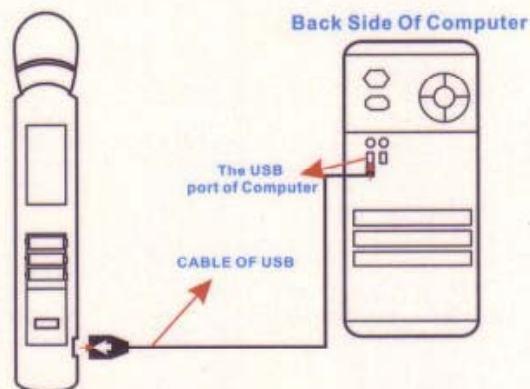

Download requirement :

Connecting USB with PC and main microphone

first , turn on MIC and tool software

Download songs , background , logo on TV screen background


Logo on TV screen and background : 352X240dpi

format :MPG

Song format : kar , okf

Option items

Song Pack

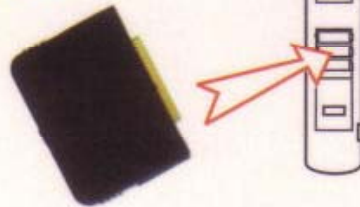


Basic items

Song List Book



Portable music
accompaniment

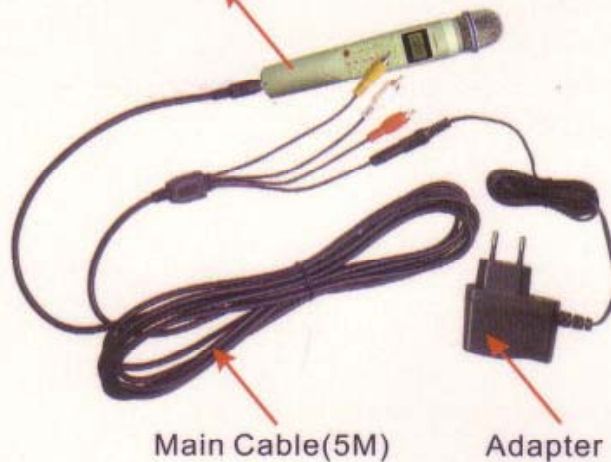

Main Cable(5M)


Adapter

Microphone instruction manual

Composing of system

1. Microphone: Dynamic
2. LCD display windows : consist of 5 numbers and function symbols.
3. Button: Set up as 22 buttons . Refer to the below sketch map.
4. Connecting wire : Audio&Video output, cable.
5. Battery: 1.5V X 4 ALKALINE.

6. Power supply : 220V AC IN, 6VDC OUT, 400mA.

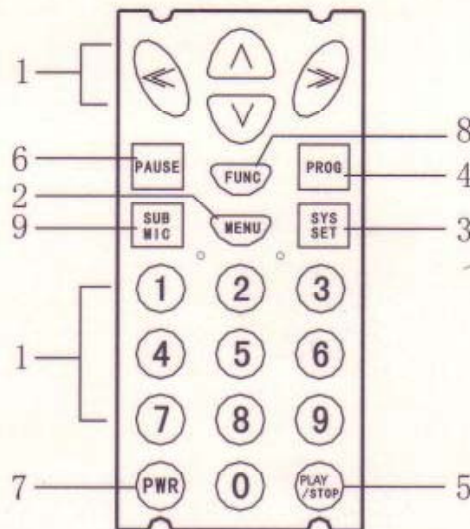


● Basic function:

1. LCD display will show song selection number and function.

a. Number button 0~9 :

For selecting song Number

For example 1: Press 5、 2、 1、 3 to select song number as 5213"

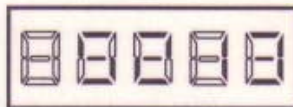




▶ "0" can be omitted in the front of the song No. Of less than 5 digits .

 
For example 2: press 2, 1 ,3 to select song Number "213"

For example 3: press 0 , 0 , 2 , 1 , 3 to select song number "213".


▶ If you got wrong song No., you can go on press the right song Number you want.

For example 4: press 2、 1、 3、 0、 0、 2、 1、 4 to select "214".

b. To search the song name by Arrow "    " .


Press "  " , The TV screen display the songlist from small to big word count or Chinese songs or in alphabetical sequence A to Z for English song.

For example :

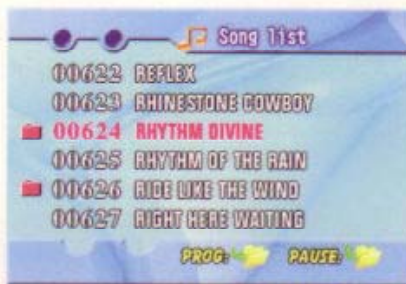

To operate as follows:

- ▶ Press " $\frac{\Delta}{\nabla}$ " button quickly, the song title will be scrolled one by one.
- ▶ Keep pressing " $\frac{\Delta}{\nabla}$ " button for long time, the song title will be scrolled page one by one.
- ▶ Press " $\leftarrow \rightarrow$ " button to scroll songlist page one by one.
- ▶ Keep pressing " $\leftarrow \rightarrow$ " to page up or page down continuously .
- ▶ To play the song by pressing " PLAY/STOP " button
- ▶ Press " MENU " to add your favorite song to the list as follows:

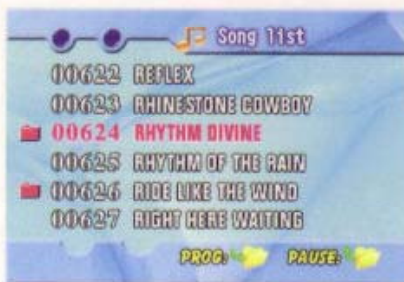

- ▶ Press " MENU " button to cancel your favorite song from the list.
- ▶ Press song number directly . The cursor move to the corresponding song number.




2. **MENU**

Press this button. TV screen will show as follows :







Operate as follows :

 
 


 
 
- a. Press number [1] : Enter to "select song" mode.
- b. Press number [2] : Enter to "Random" mode.
 - ▶ Play songs one by one automatically.
 - ▶ Stop the current songs by pressing " PLAY/STOP " and then to play the next song.
- c. Press number [3] : continues Playing songs
 - ▶ Select songs by pressing song number and then press " PLAY/STOP " to play songs.

- ▶ According to the songlist on TV screen , Press “ ” and then press “ ” to play the songs in sequence.
 - ▶ The song will be stopped if you press “ ” button during playing a song and play the next song automatically.
- d. Press number [4] : Enter “ Favorite songs ”
Play add or cancel new favorite song in the “ Favorite songs ” as follows :



- Blue line denotes to add new favorite songs. After selecting your favorite songs and then press “ ” to add new songs. To delete songs you added from this list by pressing “ ” first and then pressing “ ”. To play the song by pressing “ ”.
- e. Press number [5] : Enter to “ Added songs ”



- ▶ To play the downloading songs in the MIC by USB from PC , you can press “ ” and then press “ ”.
- f. Press number [6] : Enter to “ Record Song ”
- ▶ Press “ ” button to choose song .Red color denote the song you chosen.
 - ▶ Press “ ” button to play the selected song.
 - ▶ Press “ ” button to choose or cancel the selected song . There is an icon in front of the selected song .
 - ▶ Press “ ” button to delete song and TV screen display :



If the user don't chose the song , the system will choose the song on the cursor automatically, press “ ” choose and blue color denote that you chosen, then press “” button to confirm. Keep pressing “0” button to format record card,

► TV screen display :

 


Press “ ” button to choose and blue color denote that you chosen, then press “” button to confirm and choose “FORMAT” to delete all record songs.

G. Press “” button twice and exit the menu.

3.


Press “” button : TV shows as follows :

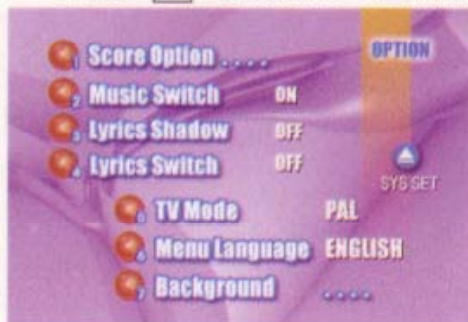

a. Press number [1] : setup the score function. Score setup include : 1. lowest score 2. highest score 3. score level



- ▶ Press number 1 : set up lowest score including 0、10、20、30、40、50、60、70、80、90.
 - ▶ Press number 2 : set up highest score from 91-100.
 - ▶ Press number 3 : set up the level of score.
After singing one song to get proper remark according to the different score setup.
- b. Press number [2] : Applause music after get high score.
- c. Press number [3]: lyric shadow.
- d. Press number [4] : Lyric hint.
- e. Press number [5]: choose Video output PAL or NTSC.

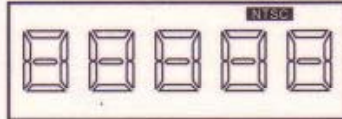
 
 
 
 



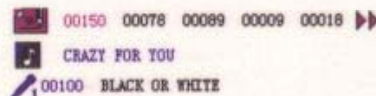
- f. Press number [6]: OSD language English or Chinese option.
- g. Press number [7] : enter into the menu of choosing background.




“ ✓ ” denotes that you want to choose; “ × ” denotes that you don't want to choose;


“ — ” denotes “No Items” .


- ▶ Press “” to choose different songchip.
 - ▶ Press “” to choose “Option” in the each songchip.
 - ▶ Press “” to change “ Option”
 - ▶ press “” to exit the menu.
 - ▶ Press “” twice to exit the above items and all adjustment will be saved in this menu after power off.
4. 
- a. In “song ordering ” and “ Favorite songs ” mode ,this button is function of adding new songs .
- b. In playing song mode, the function of the button is “Reserve ”.




- ▶ In the first line, it denotes the song list of reserve.
 - ▶ In the second line , it denotes the next playing song name of reserve.
 - ▶ In the third line , it denotes the next song number and song name of reserve .And then press "PROG" to confirm adding reserve song in the songlist.
- c. After playing the current song, the next song name of reserve will show in the second line.
- d. Press "⏮" to see the songlist of reserve .
Press "⏮" during playing song, it will play next reserve song automatically.
- e. When use main and sub microphone at the same time, can reserve song separately.

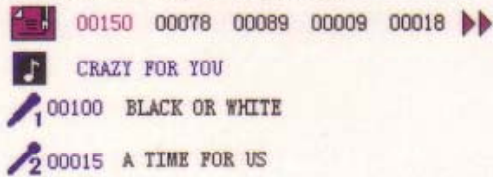

 - f. Reserve 20 songs at most.
- g. After reserve songs reach to 20, TV screen will show "FULL"
5. 
 a. To stop the current song by pressing this button during playing song.
- b. To start the current song by pressing this button after selected song.

6. 
 a. To pause during playing song by pressing this song, LCD shows PAUSE.





- b. To play the song again by pressing this button during pause song.
7. 
 a. Press this button to turn on the microphone when the microphone "Power off".
- b. Press this button twice to turn off the microphone when the microphone "Power on".




8. 

TV shows as follows after by pressing this button.

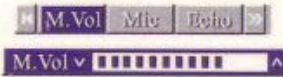


- a. Press ""
 volume → MIC → ECHO → MELODY → TEMOP
 KEY. TV screen shows as follows :




- b. Under MIC and press ""
 shows as follows :



LCD shows MIC . (adjustment range : 0~13)

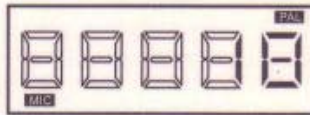


- c. Under ECHO and press this ""
 screen shows as follows :




LCD shows ECHO . (adjustment range : 0~13)




- d. Under MELODY and press ""
 TV screen will show as follows :



LCD shows MEL . (adjustment range : 0~13)

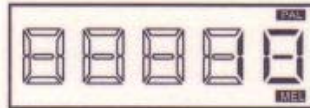


- e. Under TEMPO and press ""
 TV screen will show as follows :



LCD shows TEMPO . (adjustment range : -6~6)



f. Under KEY and press “ Δ/∇ ” button to adjust . TV screen will shows as follows:

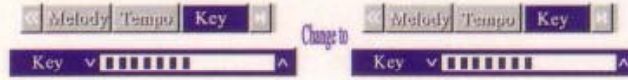


LCD shows KEY . (adjustment range : -6~6)



g. Under Main volume and press the “ Δ/∇ ” button to adjust .TV screen will show as follows :



LCD shows VOL. (adjustment range : 0-13)

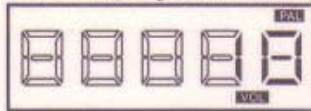

Remark : If you adjust the volume and Echo of the microphone when you select songs , it can save the setup after power off .


9. **SUB MIC**

a. Turn on or turn off sub microphone, “ ∇ ” will be displayed on TV screen. When turn on sub microphone , “ ∇ ” will be displayed on TV screen when turn off sub microphone.

Sub microphone

a. sub microphone include :

- ▶ Microphone : Dynamic
- ▶ Key: 16pcs keys
- ▶ Battery: 1.5V X 2 ALKALINE

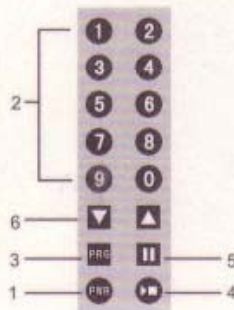

- b.If you want to use sub Microphone, please press "[MIC]" on the main Microphone to turn on the sub Microphone.
- c.key of sub Microphone and function:Refer to main Microphone key and function.
- d.When the battery is not enough, the light of the LED on the sub mic become red color to remind you to change the new battery.
- e.The sub Microphone will be power off automatically if don't use it around then minutes.

User manual for MIC Recording function

- 1、 Put recording card in the microphone
- 2、 In PLAY mode, Press "PROG" button, OSD display



If the space of memory is not enough, OSD display "No space".

- 3.After playing one song , OSD display



Press "<<, >>" button to choose and then Press "PLAY/STOP" to confirm.

- 4、 During playing, if the user Press "PLAY/STOP", microphone stop recording and then OSD display



Press "<<, >>" button to choose and then press "PLAY/STOP" to confirm.

- 5、 During recording ,if you press "MENU" or "SYS SET" button , microphone stop recording and then OSD display.



Press "<<、 >>" button to choose and then press PLAY/ STOP to confirm.

- 6、 During recording, all functions work except "PAUSE" function .
- 7、 The lyric ,music of the recording songs display synchronously
- 8、 When play the recording songs, the user can press "FUNC" button to display .




And then press "⬆️/⬆️" to adjust the volume of recording songs.

How to setup the song pack (option)



1. Press the button on the top of the cover and pull down the button of the cover of the back of the microphone.

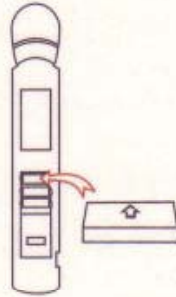

2. After turn off power , put the pack as left picture.



3.a) match the button of the cover with that of the microphone by using the right hand.
b) Close the cover pushing slightly on top of the microphone.



4. How to remove or link the cable; press down the tab and pull it to separate or link the cable.
Do not pull the cable along..



Trouble shooting



When the power doesn't come on

Using the Adapter

- ▶ Please confirm whether the range power Source are AC 100V- 240V.
- ▶ Check the contact point of the cable jack and the adapter jack.
- ▶ Reconnect the adapter.

Using the batteries

- ▶ Did you insert 4 or 2 AA batteries?
- ▶ Make sure the inserted batteries (+ -) are positioned in correct direction.
- ▶ Check the elasticity of the stainless steel in the battery case.
- ▶ Check if the batteries are in good condition.



If the microphone doesn't work

- ▶ Press the microphone [PWR] button and check the volume.



If the TV does not show the picture or sound

- ▶ Make sure the connectors are properly connected (the right color)
- ▶ Check if the TV is in the video mode



SPECIFICATIONS

1. Voice Frequency Range:
200 ~ 15,000Hz (-68db)
2. Battery:
1.5V X 4 ALKALINE (Main Microphone)
1.5V X 2 ALKALINE (Sub Microphone)
3. Life of battery : 4 hours
4. TV Channel : Video Channel
5. Specifications : 40 x 40 x 300
6. Weight : 292g
7. Voltage : 6 V
8. Wattage : <3W
9. Dot : 516 x 256 (INTERLACE)
10. Image Color INDEX 256 Color
11. Overflow (UNDER 6V):
Built-in protection Circuit for Reverse Voltage
12. Operation temperature: -20 C + 65 C